





ThermoMaven P1

User Manual

v1.1

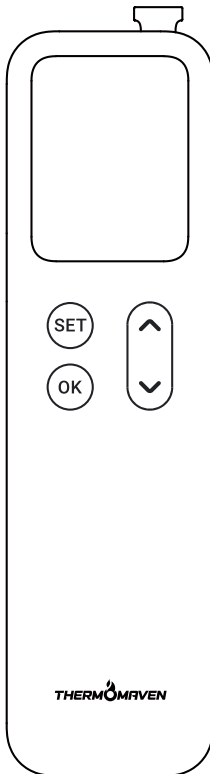

Scan the QR code to
download the latest user
manual

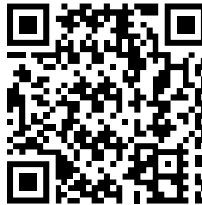

Please contact our
Customer Support Team
if you have any
questions.

☎ : 1(888) 862-1859 (USA)

✉ : support@thermomaven.com

🌐 : support.thermomaven.com

Important Safeguards 01

Using for the First Time 03

Diagram 05

Manual Mode 09

Smart Mode 11

Abnormal Status 13

Specifications 16

Troubleshooting 17

Certifications 19

Support 22

User Manual

IMPORTANT SAFEGUARDS

CAUTION: Please read this entire manual before using your ThermoMaven P1. Failure to follow these instructions could result in property damage or bodily injury.

1. **DO NOT** expose the part of the probe below the safety notch to an environment with temperatures higher than 221°F/105°C, otherwise the probe will be damaged.
2. **DO NOT** use the Probe when cooking at ambient temperature above 572°F/300°C for more than 10 minutes, An alarm will sound immediately if the ambient temperature is greater than 662°F/350°C.
3. **DO NOT** place the Device Base unit directly on the grill cover or close to any hot surface.
4. **DO NOT** use the Probe in a microwave or pressure cooker.
5. **DO NOT** use cleaning products containing alcohol, ammonia, benzene, or abrasives, as could damage the device.
6. **DO NOT** run the Probe under cold water immediately after cooking. Let the probe cool down prior to washing.
7. The **Probe** is IPX8 waterproof, and it can be washed by hand or in a dishwasher. But the **Device Base** is NOT waterproof and should not be submerged in water or placed in the dishwasher.

- 8** The probe is SHARP! Care should be exercised when handling the probe. This appliance should NOT be used by or near children or individuals with certain disabilities.
- 9** If the Probe falls into a fire or direct heat source, turn off the cooking appliance and close the lid immediately. Allow the Probe to cool completely before removing it.
- 10** Carefully remove the Probe from the cooked meat, taking caution as it may be hot.
- 11** The Device Base shall only be supplied with safety extra-low voltage (SELV) corresponding to the marking on the appliance.
- 12** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 13** This appliance contains batteries that are non-replaceable.

SAVE THESE INSTRUCTIONS

USING FOR THE FIRST TIME

1. Before using your ThermoMaven P1, ensure the product is fully charged and you have reviewed the Important Safeguards.
2. Scan the QR code to access the instructional video on product usage.
3. Download the free ThermoMaven App for iOS or Android. Open the ThermoMaven App on your smartphone or tablet. Tap on “Device” and select “Add Device”. Select ThermoMaven P1 and follow the instructions to pair your device.




How to video and
online user manual



Download APP


CLEANING

Ensure the charging contacts are clean before returning the probe to its base.

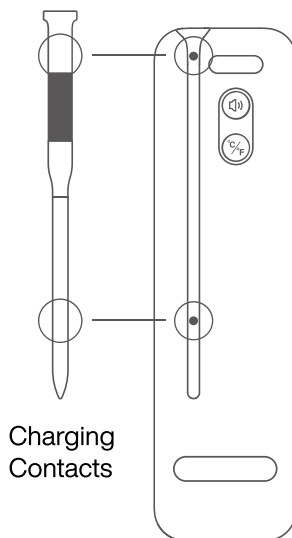


SAFETY NOTCH

Insert the probe completely into the meat, ensuring that it passes the safety notch but does not exceed the ceramic handle and that the internal sensors are in the center of the meat.

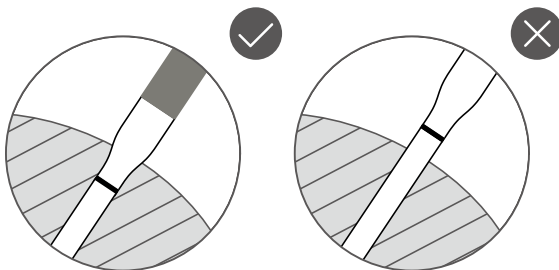

DIAGRAM

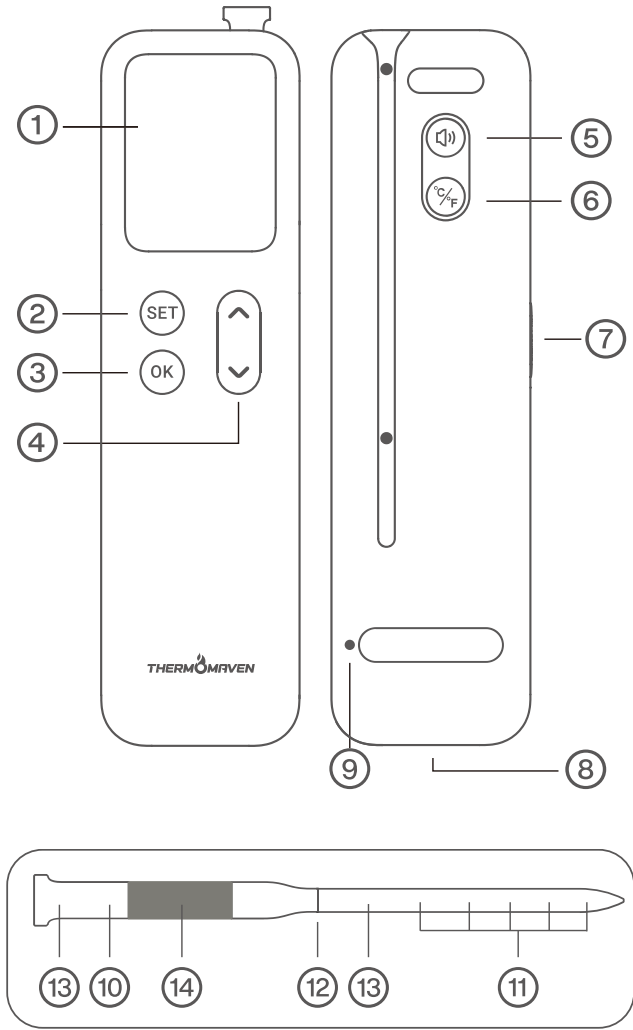

①LCD Screen

②Set Button

Press the button to enter the settings mode.

③Confirm Button

④Select Button

Press the button to select temperature and cooking mode.

⑤Volume Adjustment

Press the button to modulate the volume across three settings: high, low, and mute

⑥°C/°F Button

Press the button to select the desired temperature scale.

⑦Power Button

Press the button for 2 seconds to turn the device base on or off, and a short press will enter or exit standby mode.

⑧Type-C Charging Port

⑨Reset Button

⑩Ambient Temperature Sensor

(Ambient max 572°F/300°C)


⑪Internal Temperature Sensor 1 - 5

(Internal max 221°F/105°C)

⑫Safety Notch

⑬Stainless Steel

⑭High-Density Ceramic Handle

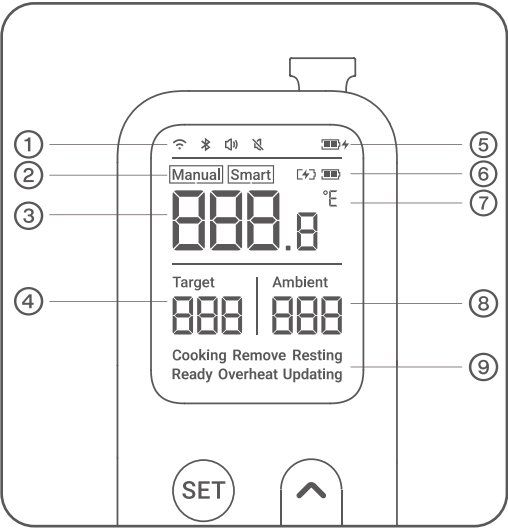

①Indicator

- Bluetooth indicator
- Sound Indicator
- Wi-Fi indicator
- Mute Indicator

②Cooking Mode¹

Press the button to enter the settings mode.

③Food Temperature

④Target Temperature

⑤Base Charging Indicator

⑥Probe Charging Indicator

⑦Temperature Scale (°F/°C)

⑧Ambient Temperature

⑨States²

1. Cooking mode

Smart Mode: Smart Mode will predict when the meat should be removed from the heat source, based on its target temperature and the rate of warming. You will be alerted when the meat is both removed from the heat and when it is ready to serve.

Manual Mode: Receive alerts only when the temperature reaches the set temperature.

The Smart Mode provides automation and predictive features, while the Manual Mode only provides alerts based on the user-set target temperature.

2. States

Remove: This state indicates that the food should be removed from the heat source.

Resting: The food has entered a resting state, allowing the residual heat to continue to rise.

Ready: The food is cooked and ready to be served.

Overheat: The Probe has been exposed to an overheated environment: any Internal sensor is higher than 221°F/105°C or ambient sensor is higher than 572°F/300°C. Remove the Probe from the heat source and allow it to cool down before using it again.


Updating: The Base is updating firmware, please wait before using it.

MANUAL MODE COOKING OPERATION

1. **Set Cooking Parameters** (Example: Target temperature at 140°F, current meat temperature at 80°F)



Initial interface

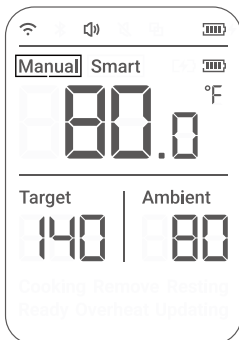


Settings interface



Return to initial interface after saving

- a. Press the **SET** button to enter setting mode, then manual or smart cooking mode will flash.
- b. Use **↑** and **↓** to select Manual mode, and press the **OK** button to enter the target temperature setting(target temperature will flash).
- c. Use **↑** and **↓** to set the target temperature you need then press **OK** or **SET** button to save the parameter and exit setting mode.

2. Start Cooking → Cooking Completed

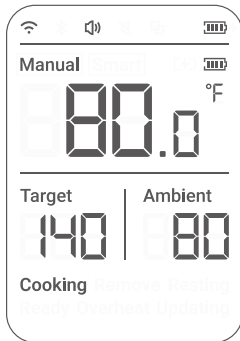

The initial cooking temperature is 80°F




It rises to 130°F during the cooking process




When it reaches 140°F, the cooking is complete (the Ready icon lights up and alarms)

SMART MODE COOKING OPERATION

1. **Set Cooking Parameters** (Example: Target temperature at 140°F, current meat temperature at 80°F)

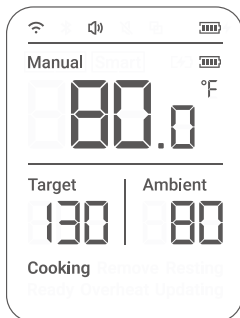

Initial interface

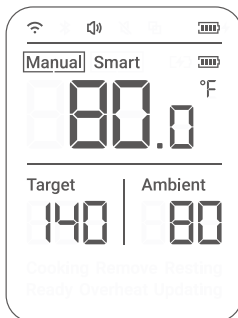

Settings interface



Return to initial interface after saving

- a. Press the **SET** button to enter setting mode, then manual or smart cooking mode will flash.
- b. Use **↑** and **↓** to select Smart mode, and press the **OK** button to enter the target temperature setting(target temperature will flash).
- c. Use **↑** and **↓** to set the target temperature you need then press **OK** or **SET** button to save the parameter and exit setting mode.

2. Begin Cooking → Remove from Heat Source → Resting Mode → Cooking Completed



a. The initial cooking temperature is 80°F.


b. When the cooking temperature reaches 130°F which is intelligently calculated by the base through the actual ambient and meat temperature, the Remove icon lights up and alarms, reminding to remove the heat source.

c. Press the **OK** button to enter the Resting mode, and the icon will light up. If the **OK** button is not pressed, the system automatically calculates Resting mode based on ambient and meat temperatures, and the icon will light up.

d. When the temperature reaches 140°F, the cooking process is complete and the Ready icon lights up.


ABNORMAL STATUS

1. Probe Disconnection Status Indicator Function

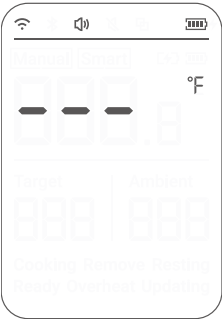

"---"represents the disconnection between the probe and the base. Check the Troubleshooting for assistance.

2.Probe & Base Low Battery Alert

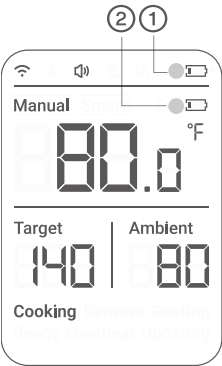

- ①Base low battery, please charge the base
- ②Probe low battery, please insert the probe into the base for charging

3. Probe Malfunction, Error Code EXX Reported



Probe Malfunction.
Check the Troubleshooting for assistance

4. Probe Overheat Alert



Probe Overheating: Overheat Icon Illuminated, Buzzer Alarm. Check the Troubleshooting for assistance

5. The probe is not charging correctly



Probe charging icon flash and, Buzzer keep Alarm.
Check the Troubleshooting for assistance

SPECIFICATIONS

Probe(Model: WTP02):

Number of Temperature Sensors	6 (5 Internal and 1 Ambient)
Temperature Range	Internal 32°F-221°F / 0°C-105°C Ambient 32°F-572°F /0°C-300°C
Accuracy	Internal ±0.5°F/0.3°C
Dimensions	5.03" (L) × 0.19" dia
Water Resistance	IPX8
Probe Material	Stainless Steel + Ceramic

Device Base

Display	LCD screen
Dimensions	6.67 x 1.86 x 1.11 inches
Battery	3.7 volt 2000 mAh
Connection	Bluetooth/Wi-Fi (device only supports 2.4 GHz Wi-Fi)
Sleep Mode	Device will automatically enter default Sleep Mode after 5 minutes if the Probe is removed

Troubleshooting

Device Base Prompt	Possible Cause	Solution
"Probe Battery Low" (Probe Battery icon flash)	The Probe's battery power is at a low level.	Plug the Probe into the Device Base to charge it.
"Device Battery Low" (Base Battery icon flash)	The Device Base's battery power is at a low level.	Use the included Type-C USB cable to charge the Device Base.
"Overheat"	The Probe has been exposed to an overheated environment.	Remove the Probe from the heat source and allow it to cool down before using it again.
"E01-E0X*"	There may be a software, hardware, sensor, or communication failure.	Contact our customer support team for assistance. They will be able to help you diagnose and resolve the issue.

Troubleshooting

Device Base Prompt	Possible Cause	Solution
Probe Disconnected	1. The probe is too far from the base. 2. The probe has no power. 3. The probe is broken	1. Move the base closer to the probe. 2. Charge the probe for five minutes, then remove it and retry. 3. If none of the above measures work, contact after-sales support.
"The probe is not charging correctly" Probe charging icon flash	1. The probe is inserted into the base, but it is not charging. 2.The probe's charging detection is blocked by a foreign object.	1. Fully insert the probe into the base 2. Clean the charging contacts on the probe and the charging contacts on the base.

Certifications



For Device Base

FCC ID: 2BC6K-WT3000

RIC: 31431-WT3000R

For Probe

FCC ID: 2BC6K-WTP2000

RIC: 31431-WTP2000

For Europe

Frequency band of operation is 2400 to 2483.5 MHz. Maximum transmit power less than 20 dBm EIRP.

[Shenzhen Auros Technology Innovation Co., Ltd] hereby declares that the radio equipment type [WT11] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following Internet address: <https://www.thermomaven.com/ce-declaration>

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

The device complies with RF specifications when used near your body at a distance of 10 mm. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.

FCC Supplier's Declaration of Conformity

Product Name: ThermoMaven P1 Wireless Thermometer

Model number: WT11

Suppliers Name: Shenzhen Auros Technology Innovation Co., Ltd

ISED Statement

ISED Statement This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference,

ISED Radiation Exposure Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device. This equipment complies with Industry Canada radiation exposure limits set forth for an uncontrolled environment.

ISED Radiation Exposure Statement

The device complies with RF specifications when used near your body at a distance of 10 mm. Ensure that the device accessories, such as a device case and device holster, are not composed of metal components. Keep the device away from your body to meet the distance requirement.



This symbol, affixed to the product or its packaging, indicates that the product must not be processed with household waste. It must be brought to an electric or electronic waste collection point for recycling and disposal. By ensuring the appropriate disposal of this product you also help in preventing potentially negative consequences for the environment and human health. The recycling of materials helps preserve our natural resources. For further information regarding the recycling of this product, please contact your municipality, local waste disposal center, or the store where the product was purchased.

Support

Please contact our Customer Support Team if you have any questions.

 : 1(888) 862-1859 (USA)

 : support@thermomaven.com

 : support.thermomaven.com

ThermoMaven Privacy Statement

We value your privacy and personal data rights, and we are the entity responsible for the collection, use, and disclosure of information under our Privacy Statement. For more details, please visit:

<https://www.thermomaven.com/privacy-statement>

Refund & Return Policy

ThermoMaven has a 30-calendar day hassle-free return policy. For more details, please visit: <https://www.thermomaven.com/refund-and-return>

Warranty

Full details are stated in ThermoMaven's warranty policy at <https://www.thermomaven.com/warranty>